

CABLE A FITS

Fisher Price

Kids Tough Waterproof Digital Camera

CANON

Canon USB Cable Lead IFC-400PCU IFC-400 for Powershot A10, A20, A30, A40, A60, A70, A72, A75, A80, A85, A95, A100, A200, A300, A310, A400, A410, A430, A460, A510, A519, A520, A530, A540, A550, A560, A610, A620, A630, A640, A650 is, A650is, A700, A710is, A710 is, A720is, A720is, SX100 is, SX100is, S30, S40, S45, S50, S60, S70, S80, S300, S330, S400, S410, S500, S510, SD10, SD20, SD31, SD100, SD110, SD200, SD300, SD400, SD430, SD500, SD550, SD600, SD630, SD700, SD700is, SD800, SD800is, SD900, SD950, SD1000, Ixus I, I zoom, II, IIs, i5, 30, 40, 50, 55, 300, 330, 400, 410, 430, Ixus 500, 511, 512, 520, 700, 750, 860is, 860 is, 950 is, 950is, 960 is, 960is, 980, G3, G4, G5, G6, G7, G9, G10, Pro 1, Pro 70 IS, EOS Digital rebel, EOS D10, EOS 10D, EOS 11D, EOS 300D, EOS 350D, Pro 1, Pro 70 IS, S1 IS, S2 IS, A1000

CASIO USB

EX-Z1000 (Cradle), GV-10, GV-20, QV-20, QV-4000, QV-4000X, QV-5000SX, QV-5700, QVR3, QV-R4, QV-R40, QV-R51, QV-R62,

FUJI

Fujifilm Finepix USB Cable Lead for A120, A345 zoom, A350 zoom, A360 zoom, A370, A400 zoom, A500 zoom, A510 zoom, A605, A610, A805, A820, A825, A900, E900 zoom, F10 zoom (not direct camera to PC), F11 zoom (Not direct camera to PC), F700 (cradle to PC), F710 (cradle to PC), F810 (cradle to PC), S20 pro zoom, S3 pro, S5 Pro, S100fs, S100 fs, S1000fd, S1000 fd, S5000, S5100, S5500, S5600, S6500fd, S6500, S7000, S9500, S9600, @ Xia, IX100, @ Xia, Slimshot, Q1 Digital, Z1 zoom (cradle to PC), Z2 zoom (cradle to PC), Z3 Zoom, and all other Fuji digital camera that require the PZ05241-100 USB cable standard III

HP USB

Photosmart 120, 120cse, 120V, 120xi, 318, 318se, 318xi, 320, 320v, 320xi, _Photosmart 433, 433v, 433xi, 435, 435v, 435xi, Photosmart 612, 612Cxi, 620, 620v, 620xi, 635, 635v, 635xi, _Photosmart 715, 715xi, 715Cxi, 720, 720v, 720xi, 733, 733v, 733xi, 735, 735v, 735xi, _Photosmart 850, 850xi, 912, 912xi, 935, 935v, 935xi, 945, 945xi, E217, E317, M22, M23, M305, M307, M307v, M307xi, M407, R507, R607, R707, R707v, R707xi, R717, _ R817 (cradle), R818, Dock 8881, Dock 8886

JVC USB

GR-DVL355, GR-DVL365, GR-DVL367, GR-DVL510, GR-DVL510U, GR-DVL512, GRDVL512U, GR-DVL520, GR-DVL520U, GR-DVL522, GR-DVL600, GR-DVL707, GR-DVL720, GR-DVL720U, GR-DVL725, GR-DVL725U, GR-DVL815, GR-DVL815U, GR-DVL817, GRDVL817U, GR-DVL818PS, GR-DVL820, GR-DVL820U, GR-DVL915, GR-DVL915U, GRDVL920, GR-DVL920U, GR-D40, GR-D50, GR-D53, GR-D60, GR-D63, GR-D70, GRD70US, GR-D72, GR-D90, GR-D90US, GR-D93, GR-D93US, GR-D94, GR-D200, GRDVM76, GR-DVM76U, GR-DVM96, GR-DVM96U, GR-DVP3, GR-DVP3U, GR-DVP5, GRDVP5U, GR-DVP7, GR-DVP7U, GR-DVP8, GR-DVP8U, GR-DVP9, GR-DVP9U, GR-DV400, GR-DV600, GR-DV700, GR-DV710PS, GR-DV3000, GR-DV4000, GR-DV2000U, GRDV3000U

KODAK USB

USB Cable Model U-5A for Kodak Camera Dock Series 3, Digital Photo Frame Easyshare EX-1011, EX1011, EX-811, EX811, S-510, S510, SV-1011, SV1011, SV-710, SV710, SV-811, SV811 etc, Photo Printer 300, 350, 500, Picture Viewer, Printer Dock Plus Series 3 etc

KONICA MINOLTA USB

Dimage E223, G400, G530, Revio KD-220Z

NIKON USB

USB Cable UC-E4 Lead for D2H, D2Hs, D2X, D2Xs, D40, D40X, D50, D60, D70, D70s, D80, D90, D100, D200, Coolpix SQ (Dock), Cool Station, SQ Dock, E2000

OLYMPUS USB4

USB Cable Lead USB4 CBUSB4 for Olympus CB USB4 - Camera synchro

cable 5 pin USB digital camera connector Olympus E-3 SLR, Camedia C-2 Zoom, C-50 Zoom, C-60, C-120, C-150, C-160, C-220 Zoom, C-300 Zoom, C-310 Zoom, C-350 Zoom, C-380, C-380 Zoom, C-390, C-400 Zoom, C-450 Zoom, C-460 Zoom, C-460 Zoom del Sol, C-520 Zoom, C-550 Zoom, C-720 Ultra Zoom, C-730 Ultra zoom, C-740 Ultra Zoom, C-750 Ultra Zoom, C-755 Ultra Zoom, C-760 Ultra Zoom, C-765 Ultra Zoom, C-770 Ultra Zoom, C-4000 Zoom, C-4100 Zoom, C-5000 Zoom, C-5050 Zoom, C-5060 Wide Zoom, C-7000 Zoom, C-8080 Zoom, D-380, D-390, D-395, D-520 Zoom, D-535 Zoom, D-540 Zoom, D-540, D-550, Zoom D-560 Zoom, D-565, D-580, FE-100, FE-270, X-1, X-2, X-200, X-250, X-300, X-400, Stylus 300, 300, 410, mju 10, mju 15, mju 20, mju 30, mju 40 PS, mju 300, mju 400, mju 410, Olympus Ferrari 2004 etc

PANASONIC USB

LUMIX DMC-F7, DMC-FZ1, DMC-FZ1s, DMC-FZ10, DMC-FZ10k, DMC-L1, DMC-L33, DMCLC1, DMC-LC5, DMC-LC5K, DMC-LC5S, DMC-LC20, DMC-LC33, DMC-LC40, DMC-LC43, PV-DV203, PV-GS2, PV-GS50, PV-GS50us, PV-GS50s, PV-GS70, SV-AV100

PENTAX USB

Optio 430RS, 330RS, 30

POLAROID USB

PhotoMax PDC-1050, PDC-1075, PDC-2150, PDC-2350, PDC-3350, PDC-4350, ion 230,

SAMSUNG USB

Digimax 35 MP3, 50 DUO, 101, 200, 201, 202, 230, 240, 250, 300, 301, 330, 340, 360, 370, 401, 410, 420, 530, 800k, U-CA 401, V40, SC-D23, SC-D24, SC-D27, SC-D29, SC-D33, SCD34, SC-D39, SC-D86, SC-D103, SC-D107, SC-D180, SC-D303, SC-D353, SC-D362, SCD363, SC-D364, SC-D365, SC-D366, SC-D590, SC-D903, SC-D963, SC-D965, SC-D5000, SC-D6040, SC-D6550, SC-DC163, SC-DC164, SC-DC165, SC-L770, SC-L870, SC-L901, SC-L907

SONY USB

DPP-EX50, DPP-FP30, DPP-FP50, DSC-F707, DSC-F717, _DSC-F828, DSC-M2(cradle), DSC-P1, _DSC-P2, DSC-P3, _DSC-P5, _DSC-P7, _DSC-P8, _DSC-P9, _DSC-P10, _DSCP12, _DSC-P20, _DSC-P30, _DSC-P31, _DSC-P32, _DSC-P41, _DSC-P50, _DSCP51, _DSC-P52, _DSC-P71, _DSC-P72, _DSC-P73, _DSC-P92, _DSC-P93, DSC-P93A, DSC-R1, DSC-S75, _DSC-S85, _DSC-S600, DSC-T7(adapter only), DSC-T9, DSCU10, _DSC-U20, _DSC-U20/B, _DSC-U20/LJ, _DSC-U30, _DSC-U40, _DSC-U50, _DSCU60, DSC-V1, _DSC-V3, DSC-W1, DSC-W1/B, DSC-W5, DSC-W7, DSC-W30, DSPP5, _DSP-P7, _DSP-P9, MVC-CD200, _MVC-CD250, _MVC-CD300, _MVC-CD350, _MVCCD400, _MVC-CD500, _MVC-FD92, _MVC-FD97, _MVC-FD100, _MVC-FD200, _

Camcorders CCD-TRV608, CLIE - PDA UX40, _CLIE - PDA UX50,

DVD: DCR-DVD100, DCR-DVD100E, DCR-DVD101, DCR-DVD101E, DCR-DVD102, DCRDVD200,

DCR-DVD201, DCR-DVD203E, DCR-DVD300, DCR-DVD505E, DCR-DVD7E,

Mini DV: DCR-HC14E, DCR-HC18E, DCR-HC19E, DCR-HC20, DCR-HC20E, DCR-HC21, DCR-HC22E, DCR-HC26, _DCR-HC30, DCR-HC30E, DCR-HC32E, DCR-HC39E, _DCRHC40, DCR-HC40E, DCR-HC42E, DCR-HC65, _DCR-HC85, DCR-HC85E, DCR-HC90E, DCR-HC1000,

MicroDv Handycam: DCR-IP1, DCR-IP1E, DCR-IP7E, DCR-IP7BT, DCR-IP55, DCRIP55E, _DCR-IP220, DCR-IP220E, DCR-PC1, _DCR-PC9, DCR-PC53E, DCR-PC55E, DCRPC101, DCR-PC103E, DCR-PC105, DCR-PC106E, DCR-PC107E, DCR-PC109, DCRPC110, DCR-PC115, DCR-PC120BT, DCR-PC330, _DCR-PC350, **Digital8:** DCR-TRV14E, DCR-TRV17, DCR-TRV18, DCR-TRV19, DCR-TRV22, DCR-TRV25, DCR-TRV27, DCRTRV28, _DCR-TRV30, DCR-TRV33, DCR-TRV38, DCR-TRV39, DCR-TRV40E, _DCR-TRV50, DCR-TRV60E, DCRTRV70, DCR-TRV80, DCR-TRV140, DCR-TRV240, DCR-TRV245E, _DCR-TRV250, DCRTRV260, DCR-TRV265E, DCR-TRV270E, DCR-TRV285E, DCR-TRV330, DCR-TRV340, DCR-TRV350, DCR-TRV355E, _DCR-TRV360, DCR-TRV460, DCR-TRV480E, DCRTRV530, _DCR-TRV730, DCR-TRV740, _DCR-TRV830, _DCR-TRV840, _DCR-TRV950, _DCR-VX700, HDR-HC1E

Memory stick Voice recorder: ICD-MS515VTP, ICD-MS515, _ICD-BP150VTP, ICD-BP150, ICD-ST10VTP, ICD-ST10, ICD-P17

TOSHIBA USB

PDR-M700, PDR-M500

VIVITAR USB

Vivicam 3301, 3315, 3325, 3340, 3345, 3350, 3355, 3500, 3555, 3555T, _Vivicam 3610, 3625, 3630, 3632, 3640, 3650, 3675, _3705, 3710, 3715, 3715A, 3715B, 3730, 3735, 3740,

3746, 3750, 3755, 3760, 3765, 3780, 3805, 3825, 3826, 3935, Vivicam V30, V25, V55, V60, _DVR-200_

CABLE B FITS

CASIO USB

QV-3EX, QV-3EX plus, QV-2000 plus, QV-2000 Starter, QV-2000UX, QV-2300UX, QV-2400UX, QV-2800UX, QV-2900UX, QV-3000EX, QV-3500EX, QV-8000SX, QV-8000 starter

FUJI STANDARD USB

Fuji Fujifilm USB camera cable lead for Finepix 1300, 1400 zoom, 2200, 2300, 2400 zoom, 2600 zoom, 2800 zoom, 4700 zoom, 4800 zoom, 4900 zoom, 6800 zoom, 6900 zoom, 30i, 40i, 50i, A101, A201, A202, A203 zoom, A204, A204 zoom, A303, A403, F401 (cradle to PC), F410 (cradle to PC), F601 (cradle to PC), M603 (cradle to PC), S1 Pro, S2 Pro, S3000 zoom, S304 zoom, S3100 zoom, S3500 zoom, S602 Pro zoom, S602 zoom, and all other Fuji Digital Cameras that require the USB Standard I cable PZ03529-100

HP USB

HP PhotoSmart 215, 215xi

KONICA MINOLTA USB

Dimage G500, G600, Revio KD-200zoom, KD-220zoom, KD-310zoom, KD-400zoom, KD-410zoom, KD-420, KD-500zoom, KD-510zoom

PANASONIC USB

PV-SD4090, SD5000, PV-DV121, PV-DV201, PV-DV221, PV-DV351, PV-DV401, PV-DV601, PV-DV701

TOSHIBA USB

PDR-3310, PDR-3320, PDR-M11, PDR-M21, PDR-M25, PDR-M60, PDR-M61, PDR-M65

VIVITAR USB

Vivicam 3635, 3745

CABLE C FITS

G.E Cameras

A735, A835, A1030, A1230, G2, E840s, E840 s, E1035, E1050TW, E1050 TW, E1055W, E1055 W, E1235

FUJI USB Cable

USB camera cable Fuji Fujifilm S5800, S8000, S8000fd, F50, F50fd, F60fd, F100fd, F100 fd, S2000hd, S8100fd, S8100 fd, Z10, Z10fd, Z100fd, Z100, F20, F30, F31fd, F31, F40, F40fd, F45, F45fd, F47, F47fd, F460, F470, F480, F650, S5700, J10, J12, J15fd, J50, J100, J110w, J120, J150w Fuji Part Number P645-083-1355 Fuji Type IV

KONICA MINOLTA USB

Dimage A200, Dimage E323, E500, X1 (cradle), X50, X60, Z3, Z5, Z6, Z10, Z20, Z50, Maxxum 5D, 7D, Dynax 5D body, Dynax 7D

NIKON USB

Nikon UC-E6 UCE6 USB Cable for Coolpix 2100, 2200, 3100, 3200, 3700, 4100, 4200, 4600, 4800, 5100, 5200, 5600, 5900, 7600, 7900, 8400, 8800, L1, L2, L3, L4, L5, L6, L10, L11, L12, L14, L15, L16, L18, P1, P2, P3, P4, P50, P60, P5000, P5100, P6000, SQ, S4, S9, S10, S200, S210, S500, S510, S520, S560, S600, S710S Camera Lead

OLYMPUS

USB Cable for Olympus Digital Camera FE-150, FE-160, FE-180, FE-190, FE-220, FE-230, FE-240, FE-250, FE-280, FE-290, FE-300, FE-310, FE-340, FE-350, fe-360, FE-370, X-785, X-790, X-795, X-800, X-835 X-845, etc CBUSB7 CBUSB7

PANASONIC USB

Panasonic Digital Camera USB cable Lead for Lumix DMC-FS3, DMC-FS5, DMC-FS20, DMC-FX01, DMC-FX2, DMC-FX3, DMC-FX07, DMC-FX7, DMC-FX8, DMC-FX9, DMC-FX07, DMC-FX12, DMC-FX35, DMC-FX37, DMC-FX50, DMC-FX100, DMC-FX150, DMC-FX500, DMC-FZ1, DMC-FZ2, DMC-FZ3, DMC-FZ4, DMC-FZ7, DMC-FZ10, DMC-DZ15, DMC-FZ20, DMC-FZ5, DMC-FZ7, DMC-FZ28, DMC-G1, DMC-L10, DMC-L10K, DMC-L10KEB/K, DMC-LS2, DMC-LS70, DMC-LS75, DMC-LS80, DMC-LX1, DMC-LX2, DMCLX3

DMC-LZ1, DMC-LZ2, DMC-LZ3, DMC-LZ4, DMC-LZ5, DMC-LZ8, DMC-LZ10,
DMC-TZ1, DMC-TZ3, DMC-TZ4, DMC-TZ5, DMC-TZ11, DMC-TZ15, DMCTZ24,
PV-SD4090, PV-SD5000, SVSD300, SVSD310, SVSD710

PENTAX USB

USB I-USB7 Cable Lead for Pentax Optio Camera L40, 33WR, 33XWR,
43WR, 50, 50L, 60, 450, 550, 555, 750Z, A10, A20, A30, A40, E10, E20, L30,
E30, E40, E50i5, K20d, K200d, K10 Grand Prix, K100d Super, K10d, K100d,
K110d, L20, L50, MX, MX4, M10, M20, M30, M40, M50, M60, PS1, PS2i, S,
S4, S4i, S5i, S5n, S5z, S6, S7, S10, S12, S30, S40, S45, S50, S51, S55,
S60, SV, SVi, T10, T20, T30, V20 WP, WPi, W10, W20, W30, W60, X, istD,
ist DS, ist DL, ist DS2, istDL2, KD100, KD10, Z10 etc

SONY USB CABLE

USB Cable for Sony Alpha DSLR-A100 D-SLR, DSLR-A200, DSLR-A300,
DSLR-A350, DSLR-A700 DSC-S650 Digital Camera

SAMSUNG USB

Samsung USB Cable Lead 370526 for **Digimax**, 430, 3000, 3100, 4500, A5,
A40, A50, A55, A400, GX-1L, GX-1LS, GX20, GX-20, L50, L60, L77 , S85,
S730, S1050, U-CA3, U-CA4, U-CA401, U-CA505 , V2, V3, V4, V5, V6, V40,
V50, V70, V700, V800, V4000

Vivitar USB

USB connection cable lead for Vivitar Vivicam 4345, 5195, 6300, 6320, 8600,
6324, 3815, 3915, 3930, 4000, 5340s, 3000, 7310, 7388, 7388s, 8300, 5385,
5386, 4385, 8300s digital camera

CABLE D Fits

EPSON USB

PhotoPC 3000z, 3100z, CP-900z

HP USB

PHOTOSMART 315, 315vm, 315xi

JVC USB

GC-X, GC-X3. GC-QX3

KODAK USB

Kodak U-4 U4 USB digital camera cable lead for Easyshare C300, CX7220,
CX7300, CX7310, CX7330, CX7430, CX7525, CX7530, CX4200, CX4210,
CX4230, CX4300, CX4310, CX6200, CX6230, CX6330, CX6445, DC4800,
LS420, LS443, LS443, LS633, LS743, LS753, Z7590, Printer dock 4000,
Printer dock 6000, Camera dock II, Photo Frame Dock, Printer Dock Plus,
Printer Dock, Camera Dock 6000, Camera Dock II, Camera Dock, DX3215,
DX3500, DX3600, DX3700, DX3900, DX4330, DX4530, DX4900, DX6340,
DX6440, DX6490, DX7440, DX7590, DX7630 etc

KONICA MINOLTA USB

Dimage 5, 7, 7i, 7Hi, 2330, E203

OLYMPUS

Olympus Digital Camera USB Cable Sync Lead CBUSB1 CB-USB1 for
Camedia C-1, C-1 zoom, C-200 zoom, C-211 zoom, C-700 ultra zoom, C-
1000 Series, C-2000, C-2040 Zoom, C-2100 ultra zoom, C-3000 series, C-
3000 zoom, C-3020 zoom, C-3030 zoom, C-3040 zoom, C-4000 Series, C4040
zoom, D-100, D-150, D-230, D-270, D-370, D-510 Zoom, Camedia E-
10, E-20, E-20N, E-20P, E-100, E-100RS, Camedia 2112-DP, Olympus Brio,
DS-2000, DS-3000, DW-90, 2112-DP etc

SAMSUNG USB

Digimax 210se, 220se, 350se

SONY USB

DSC-F55v, DSC-F505, DSC-F505v, DSC-S30, DSC-S50, DSC-S70, MVC-CD1000

CABLE E FITS

FUJI

Fuji Fujifilm USB Mini B Camera Cable Finepix Z20fd, Z20 fd, A205s, A205,

A210, A310, A330, A340, A405, A607, A699, A920, E500, E510, E550, F401 zoom, F402, F410, F420, F440, F450, F455, F610, F700, F710, F810, M603, Q1, V10 zoom, Z1, Z2, Z3, Z5FD
IXUS, 970is, 960is, 950is, 860is, 90is, 85is, 80is, 75, 70
POWERSHOT, G9, S5is, A650is, A590is, A580, A570is, A560, A550, A470, A460, etc PZ04832-100

CABLE F FITS

CASIO USB

EX-P600, EX-P700, EX-P505, EX-Z120

KONICA MINOLTA USB

Dimage A1, A2, F100, F200, F300, X, Xg, Xi, Xt, X20, X21, X31, Dimage Z1, Z2,

VIVITAR VIVICAM USB

Vivicam 3815, 3915, 3930, 4000, 5340

CABLE G FITS

CASIO USB

EX-S1 Cradle, EX-S2 Cradle, EX-S3 Cradle, EX-S20 Cradle, EX-S100 Cradle, EX-S500 Cradle, EX-S600 Cradle, EX-Z3 Cradle, EX-Z4 Cradle, EX-Z40 Cradle, EX-Z50 Cradle, EXZ55 Cradle, EX-Z57 Cradle, EX-Z60 Cradle, EX-Z600 Cradle, EX-Z750 Cradle, EX-Z850 Cradle, M20 Cradle

Concord Eye-Q

Eye-Q Duo, Duo 1300, Duo 2000, Duo LCD, DV2020, 3X, Go, Duo, Duo 1300, Duo 2000, Duo LCD, Go LCD, Go 2000, Go Wireless, 1000, 2040, 2133Z, 3040AF, 3042AF, 3043AF, 3045, 3045AS, 3103, 3120AF, 3132Z, 3340Z, 3341Z, 3345Z, 3346Z, 4060 AF, 4340Z, 4360Z, 4363Z, 5062AF, 5063AS, 5330Z, 5345Z

HP USB

Photosmart 618, 618xi, C618, C912

NIKON USB

UCE-10 Coolpix S1, S2, S3, S5, S6, S7, S7c, S8

PENTAX USB

EI-200, EI-2000

VIVITAR USB

Vivicam DSC350, 355, 2795, 2800, 3540, 3550

CABLE H FITS

SAMSUNG SUC-C2.

Samsung Digimax Camera SUC-C2 SUCC2 USB Cable for Samsung i5, i50, i6, i7, i70, i85, L70, L73, L730, L74, L80, L83, L830, L83T, NV3, NV5, NV7 OPS, NV8, NV10, NV11, NV12, NV15, NV18, NV20 digital camera

Cable I FITS

Easysshare

C310, C315, C330, C340, C360, C433, C503, C513, C530, C533, C603, C613, C623, C633, C643, C653, C663, C703, C713, C743, C763, C813, C875, C913, C1013, CD33, CD40, CD43, CD50, CW330, CD913, Photo Frame Dock 2, Camera Dock Series 3

EASYSHARE-ONE / 4 MP, EASYSHARE-ONE / 6 MP

M753, M763, M853, M863, M873, M883, M893 IS, M1033, M1063, M1073

P712, P850, P880

V530, V550, V570, V603, V610, V705, V803, V1003, V1073, V1233, V1253, V1273

Z612, Z650, Z700, Z710, Z712 IS, Z730, Z740, Z760, Z812 IS, Z885, Z1012 iS, Z1015 iS, Z1085 IS, Z1275, Z1285, Z1485 IS, Z8612 IS, ZD710 (Kodak U-8)

Cable J FITS

OLYMPUS

USB Cable for Olympus E-420, C-5500 Sport Zoom, C-170, C-180, C-480, C-500, C-7000 Zoom, D-425, D-435, D-545, D-595, D-630 Zoom, Evolt E-300,

E-330, E-400, E-410, Evolt E-500, E-510, FE-120, FE-130, FE-140, FE-200, FE-360, FE-500, FE-5500, SP-310, SP-320, SP-350, SP-500 UZ, SP-500Z, SP-510 UZ, SP-550, SP-560 UZ, SP-570 UZ, SP-700, Stylus Digital 500, 600, 700, 710, 720 SW, 730, 740, 750, 770 SW, 800, 810, 1000, Verve, Verve S, MJU 40, 500, 600, 700, 710, 720, 725, 730, 740, 750, 770, 780, 790 SW, 800, 810, 820, 830, 840, 850 SW, 1000, 1010, 1020, 1030 SW, 1040MJU, 1050SW, 1060MJU, 1200, Mini Digital, Mini S Digital and all Olympus digital camera that take the CB-USB5 or CB-USB6 USB Lead

Cable K FITS

Samsung SUC-C3

Digimax

i8, i80, L100, L110, L120, L200, L201, L210, L310W, M110, NV4, NV9, NV30, NV33, NV40, NV103, P800, P1000, SL310, TL9

Cable L FITS

Sony VMC-MD1 (usb only)

DSC-F88, DSC-H3, DSC-H7, DSC-H9, DSC-H10, DSC-H50, DSC-N1, DSCN2, DSC-P100, DSC-P120, DSC-P150, DSC-P200, DSC-T2, DSC-T5, DSCT9, DSC-T10, DSC-T20, DSC-T50, DSC-T70, DSC-T77, DSC-T70HDPR, DSC-T100, DSC-T200, DSC-T300, DSC-T700, DSC-W55, DSC-W80, DSCW85, DSC-W90, DSC-W110, DSC-W120, DSC-W130, DSC-W150, DSCW170, DSC-W200, DSC-W300

Cable M FITS

NEW Samsung SUC-C1

D53 S500 S530 S600 S800 S830 S1000 S1030

Cable N FITS

Samsung SUC-C4

IT100HD, NV24HD, NV100HD, SL820HD, TL34HD

Cable O FITS

Casio Exilim

EX-Z6, EX-Z7, EX-Z60, EX-Z70, EX-S500, EX-S600, EX-S770, EX-S800, EXS880, EX-Z60, EX-Z70, EX-Z500, EX-Z600, EX-Z700, EX-Z750, EX-Z850, EX-Z1000