

CABLE A FITS

CANON

Canon USB Cable Lead IFC-400PCU IFC-400 for Powershot A10, A20, A30, A40, A60, A70, A72, A75, A80, A85, A95, A100, A200, A300, A310, A400, A410, A430, A460, A510, A519, A520, A530, A540, A550, A560, A610, A620, A630, A640, A650 is, A650is, A700, A710is, A710 is, A720is, A720is, SX100is, SX100is, S30, S40, S45, S50, S60, S70, S80, S300, S330, S400, S410, S500, S510, SD10, SD20, SD31, SD100, SD110, SD200, SD300, SD400, SD430, SD500, SD550, SD600, SD630, SD700, SD700is, SD800, SD800is, SD900, SD950, SD1000, Ixus I, I zoom, II, IIs, i5, 30, 40, 50, 55, 300, 330, 400, 410, 430, Ixus 500, 511, 512, 520, 700, 750, 860is, 860 is, 950 is, 950is, 960 is, 960is, 980, G3, G4, G5, G6, G7, G9, G10, Pro 1, Pro 70 IS, EOS Digital rebel, EOS D10, EOS 10D, EOS 11D, EOS 300D, EOS 350D, Pro 1, Pro 70 IS, S1 IS, S2 IS, A1000

CASIO USB

EX-Z1000 (Cradle), GV-10, GV-20, QV-20, QV-4000, QV-4000X, QV-5000SX, QV-5700, QV-R3, QV-R4, QV-R40, QV-R51, QV-R62

FUJI

Fujifilm Finepix USB Cable Lead for A120, A345 zoom, A350 zoom, A360 zoom, A370, A400 zoom, A500 zoom, A510 zoom, A605, A610, A805, A820, A825, A900, E900 zoom, F10 zoom (not direct camera to PC), F11 zoom (Not direct camera to PC), F700 (cradle to PC), F710 (cradle to PC), F810 (cradle to PC), S20 pro zoom, S3 pro, S5 Pro, S100fs, S100 fs, S1000fd, S1000 fd, S5000, S5100, S5500, S5600, S6500fd, S6500, S7000, S9500, S9600, @ Xia, IX100, @ Xia, Slimshot, Q1 Digital, Z1 zoom (cradle to PC), Z2 zoom (cradle to PC), Z3 Zoom, and all other Fuji digital camera that require the PZ05241-100 USB cable standard III

HP USB

Photosmart 120, 120cse, 120V, 120xi, 318, 318se, 318xi, 320, 320v, 320xi, _Photosmart 433, 433v, 433xi, 435, 435v, 435xi, Photosmart 612, 612Cxi, 620, 620v, 620xi, 635, 635v, 635xi, _Photosmart 715, 715xi, 715Cxi, 720, 720v, 720xi, 733, 733v, 733xi, 735, 735v, 735xi, Photosmart 850, 850xi, 912, 912xi, 935, 935v, 935xi, 945, 945xi, E217, E317, M22, M23, M305, M307, M307v, M307xi, M407, R507, R607, R707, R707v, R707xi, R717, _ R817 (cradle), R818, Dock 8881, Dock 8886

JVC USB

GR-DVL355, GR-DVL365, GR-DVL367, GR-DVL510, GR-DVL510U, GR-DVL512, GRDVL512U, GR-DVL520, GR-DVL520U, GR-DVL522, GR-DVL600, GR-DVL707, GR-DVL720, GR-DVL720U, GR-DVL725, GR-DVL725U, GR-DVL815, GR-DVL815U, GR-DVL817, GRDVL817U, GR-DVL818PS, GR-DVL820, GR-DVL820U, GR-DVL915, GR-DVL915U, GRDVL920, GR-DVL920U, GR-D40, GR-D50, GR-D53, GR-D60, GR-D63, GR-D70, GRD70US, GR-D72, GR-D90, GR-D90US, GR-D93, GR-D93US, GR-D94, GR-D200, GRDVM76, GR-DVM76U, GR-DVM96, GR-DVM96U, GR-DVP3, GR-DVP3U, GR-DVP5, GRDVP5U, GR-DVP7, GR-DVP7U, GR-DVP8, GR-DVP8U, GR-DVP9, GR-DVP9U, GR-DV400, GR-DV600, GR-DV700, GR-DV710PS, GR-DV3000, GR-DV4000, GR-DV2000U, GRDVP3000U

KODAK USB

USB Cable Model U-5A for Kodak Camera Dock Series 3, Digital Photo Frame Easyshare EX-1011, EX1011, EX-811, EX811, S-510, S510, SV-1011, SV1011, SV-710, SV710, SV-811, SV811 etc, Photo Printer 300, 350, 500, Picture Viewer, Printer Dock Plus Series 3

KONICA MINOLTA USB

Dimage E223, G400, G530, Revio KD-220Z

NIKON USB

USB Cable UC-E4 Lead for D2H, D2Hs, D2X, D2Xs, D40, D40X, D50, D60, D70, D70s, D80, D90, D100, D200, Coolpix SQ (Dock), Cool Station, SQ Dock, E2000

OLYMPUS USB4

USB Cable Lead USB4 CBUSB4 for Olympus CB USB4 - Camera Synchro cable 5 pin USB digital camera connector Olympus E-3 SLR, Camedia C-2 Zoom, C-50 Zoom, C-60, C-120, C-150, C-160, C-220 Zoom, C-300 Zoom, C-310 Zoom, C-350 Zoom, C-380, C-380 Zoom, C-390, C-400 Zoom, C-450 Zoom, C-460 Zoom, C-460 Zoom del Sol, C-520 Zoom, C-550 Zoom, C-720 Ultra Zoom, C-730 Ultra zoom, C-740 Ultra Zoom, C-750 Ultra Zoom, C-755 Ultra Zoom, C-760 Ultra Zoom, C-765 Ultra Zoom, C-770 Ultra Zoom, C-4000 Zoom, C-4100 Zoom, C-5000 Zoom, C-5050 Zoom, C-5060 Wide Zoom, C-7000 Zoom, C-8080 Zoom, D-380, D-390, D-395, D-520 Zoom, D-535 Zoom, D-540 Zoom, D-540, D-550, Zoom D-560 Zoom, D-565, D-580, FE-100, FE-270, X-1, X-2, X-200, X-250, X-300, X-400, Stylus 300, 300, 410, mju 10, mju 15, mju 20, mju 30, mju 40 PS, mju 300, mju 400, mju 410, Olympus Ferrari

PANASONIC USB

LUMIX DMC-F7, DMC-FZ1, DMC-FZ1s, DMC-FZ10, DMC-FZ10k, DMC-L1, DMC-L33, DMCLC1, DMC-LC5, DMC-LC5K, DMC-LC5S, DMC-LC20, DMC-LC33, DMC-LC40, DMC-LC43, PV-DV203, PV-GS2, PV-GS50, PV-GS50us, PV-GS50s, PV-GS70, SV-AV100

SAMSUNG USB

Digimax 35 MP3, 50 DUO, 101, 200, 201, 202, 230, 240, 250, 300, 301, 330, 340, 360, 370, 401, 410, 420, 530, 800k, U-CA 401, V40, SC-D23, SC-D24, SC-D27, SC-D29, SC-D33, SCD34, SC-D39, SC-D86, SC-D103, SC-D107, SC-D180, SC-D303, SC-D353, SC-D362, SCD363, SC-D364, SC-D365, SC-D366, SC-D590, SC-D903, SC-D963, SC-D965, SC-D5000, SC-D6040, SC-D6550, SC-DC163, SC-DC164, SC-DC165, SC-L770, SC-L870, SC-L901, SC-L907

SONY USB

DPP-EX50, DPP-FP30, DPP-FP50, DSC-F707, DSC-F717, DSC-F828, DSC-M2(cradle), DSC-P1, DSC-P2, DSC-P3, DSC-P5, DSC-P7, DSC-P8, DSC-P9, DSC-P10, DSCP12, DSC-P20, DSC-P30, DSC-P31, DSC-P32, DSC-P41, DSC-P50, DSCP51, DSC-P52, DSC-P71, DSC-P72, DSC-P73, DSC-P92, DSC-P93, DSC-P93A, DSC-R1, DSC-S75, DSC-S85, DSC-S600, DSC-T7(adapter only), DSC-T9, DSCU10, DSC-U20, DSC-U20/B, DSC-U20/LJ, DSC-U30, DSC-U40, DSC-U50, DSCU60, DSC-V1, DSC-V3, DSC-W1, DSC-W1/B, DSC-W5, DSC-W7, DSC-W30, DSPP5, DSP-P7, DSP-P9, MVC-CD200, MVC-CD250, MVC-CD300, MVC-CD350, MVCCD400, MVC-CD500, MVC-FD92, MVC-FD97, MVC-FD100, MVC-FD200. **Camcorders:** CCD-TRV608, CLIE - PDA UX40, CLIE - PDA UX50, DVD: DCR-DVD100, DCR-DVD100E, DCR-DVD101, DCR-DVD101E, DCR-DVD102, DCRDVD200, DCR-DVD201, DCR-DVD203E, DCR-DVD300, DCR-DVD505E, DCR-DVD7E, DCR-HC14E, DCR-HC18E, DCR-HC19E, DCR-HC20, DCR-HC20E, DCR-HC21, DCR-HC22E, DCR-HC26, DCR-HC30, DCR-HC30E, DCR-HC32E, DCR-HC39E, DCRHC40, DCR-HC40E, DCR-HC42E, DCR-HC65, DCR-HC85, DCR-HC85E, DCR-HC90E, DCR-HC1000, DCR-IP1, DCR-IP1E, DCR-IP7E, DCR-IP7BT, DCR-IP55, DCRIP55E, DCR-IP220, DCR-IP220E, DCR-PC1, DCR-PC9, DCR-PC53E, DCR-PC55E, DCRPC101, DCR-PC103E, DCR-PC105, DCR-PC106E, DCR-PC107E, DCR-PC109, DCRPC110, DCR-PC115, DCR-PC120BT, DCR-PC330, DCR-PC350, DCR-TRV14E, DCR-TRV17, DCR-TRV18, DCR-TRV19, DCR-TRV22, DCR-TRV25, DCR-TRV27, DCRTRV28, DCR-TRV30, DCR-TRV33, DCR-TRV38, DCR-TRV39, DCR-TRV40E, DCR-TRV50, DCR-TRV60E, DCRTRV70, DCR-TRV80, DCR-TRV140, DCR-TRV240, DCR-TRV245E, DCR-TRV250, DCRTRV260, DCR-TRV265E, DCR-TRV270E, DCR-TRV285E, DCR-TRV330, DCR-TRV340, DCR-TRV350, DCR-TRV355E, DCR-TRV360, DCR-TRV460, DCR-TRV480E, DCRTRV530, DCR-TRV730, DCR-TRV740, DCR-TRV830, DCR-TRV840, DCR-TRV950, DCR-VX700, HDR-HC1E, ICD-MS515VTP, ICD-MS515, ICD-BP150VTP, ICD-BP150, ICD-ST10VTP, ICD-ST10, ICD-P17